



## Forklift Extensions 1800mm and 2400mm SPECIFICATION SHEET



The 1025H concrete skip has been the long standing favourite for ground workers and those looking for a robust all round skip. With the geared gate mechanism, this skip is ideal for fast controlled pouring of concrete in large volumes.

## Technical Data

Specifications	
Capacity	1000 litres
Safe Working Load	2400 kg
Height	2900 mm
Width	1150 mm
Weight	460 kg

## Working Instructions

The following instructions must be read and understood by each intended user of this equipment; if there is anything you do not understand contact HTC.

Ensure the equipment is adequate for the job you need to carry out. You must not operate this equipment if you are under the influence of alcohol, drugs or if you are feeling unwell. A risk assessment should be carried out prior to moving or using this equipment.

The following PPE (Personal protective equipment) should be worn when using this equipment: Gloves / Goggles / Hard Hat / Steel Toecap boots / Hi-Vis Vest. We also suggest suitable clothing should be worn.

### **Familiarise yourself with the equipment, its use and how it works!**

As this equipment is used at multi-level, ensure the intended area for use is clear of overhead cables and power lines or similar hazards which may affect its safe use. This equipment must always be used in conjunction with your site safety policies.

The skip should be lifted with suitably rated lifting equipment. The lifting equipment hook should be secured to the bale arm of the skip ensuring the lifting hook is fully closed.

The bale arm should be secured in a position that ensures it cannot swing down or drop on anyone when the skip is not in use.

Check that the gate is fully closed prior to filling the skip. Ensure that the gate handle is locked using the locking chain.

Once the skip has been filled raise it slowly off the ground and check for balance and security. If the load is deemed safe then move the load to the intended discharge area avoiding jolting movements.

Once in position above the intended discharge point release the concrete slowly by turning the geared wheel. This must be done in repeated short periods to ensure the whole content does not discharge at once, turn the wheel in the opposite direction to close the gate.

Once work has been completed clean the skip out thoroughly ensuring the gate area (inside and out) is clean and clear of residual grout and concrete aggregate.

The work area must be clear of obstructions with adequate space for the operative to work safely around the equipment. Check and ensure the equipment is inspected and in a safe condition prior to its use. Also ensure that its load is stable and secure.

